

1.	INSTRUCTIONS FOR PROPER USE	12
2.	SAFETY INSTRUCTION	13
3.	KNOW YOUR HOB	14
4.	BEFORE FIRST USE	14
5.	RESIDUAL HEAT	14
6.	COOKING TIPS	15
7.	CLEANING AND MAINTENANCE	16
8.	SOMETHING WRONG?	16
9.	INSTALLATION	17



INSTRUCTIONS FOR THE USER: these contain user advice, description of the commands and the correct procedures for cleaning and maintenance of the appliance.



INSTRUCTIONS FOR THE INSTALLER: these are intended for the **qualified technician** who must install the appliance, set it functioning and carry out an inspection test.

1. INSTRUCTIONS FOR PROPER USE



ELECTRICAL CONNECTION: PLEASE REFER TO INSTALLATION INSTRUCTION FOR THE GAS & ELECTRICAL SAFETY REGULATIONS AND THE VENTILATION REQUIREMENTS.

IN YOUR OWN INTEREST, AND THAT OF SAFETY, IT IS THE LAW THAT ALL GAS AND ELECTRICAL APPLIANCES BE INSTALLED AND SERVICE BY COMPETENT PERSONS, WHO WILL COMPLY WITH THE RELEVANT STANDARDS AND REGULATIONS.

CORGI REGISTERED INSTALLERS UNDERTAKE TO WORK TO SATISFACTORY STANDARDS.

DISCONNECTION OF GAS AND ELECTRIC APPLIANCES SHOULD ALWAYS BE CARRIED OUT BY COMPETENT PERSON.



THIS MANUAL IS AN INTEGRAL PART OF THE APPLIANCE AND THEREFORE MUST BE KEPT IN ITS ENTIRETY AND IN AN ACCESSIBLE PLACE FOR THE WHOLE WORKING LIFE OF THE COOKING HOB. WE ADVISE READING THIS MANUAL AND ALL THE INSTRUCTIONS THEREIN BEFORE USING THE COOKING HOB. INSTALLATION MUST BE CARRIED OUT BY QUALIFIED PERSONNEL IN ACCORDANCE WITH THE REGULATIONS IN FORCE. THIS APPLIANCE IS INTENDED FOR DOMESTIC USES AND CONFORMS TO CURRENT **REGULATIONS IN FORCE**. THE APPLIANCE HAS BEEN BUILT TO CARRY OUT THE FOLLOWING FUNCTIONS: **COOKING AND HEATING-UP OF FOOD**. ALL OTHER USES ARE CONSIDERED IMPROPER.

THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR IMPROPER USE.

NEVER USE THIS APPLIANCE FOR HEATING ROOMS.



DO NOT LEAVE THE PACKING IN THE HOME ENVIRONMENT. SEPARATE THE VARIOUS WASTE MATERIALS AND TAKE THEM TO THE NEAREST SPECIAL GARBAGE COLLECTION CENTRE.



THIS APPLIANCE IS MARKED ACCORDING TO THE EUROPEAN DIRECTIVE 2002/96/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE).

THIS GUIDELINE IS THE FRAME OF A EUROPEAN-WIDE VALIDITY OF RETURN AND RECYCLING ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.

DO NOT OBSTRUCT VENTILATION OPENINGS AND HEAT DISPERSAL SLITS.



THE IDENTIFICATION PLATE, WITH TECHNICAL DATA, SERIAL NUMBER AND MARKING IS CLEARLY VISIBLE UNDER THE CASING.

THE PLATE ON THE CASING MUST NOT BE REMOVED.



TAKE CARE NOT TO SPILL SUGAR OR SWEET MIXTURES ON TO THE COOKING HOB WHEN HOT. NEVER PLACE MATERIALS OR SUBSTANCES WHICH MAY MELT (PLASTIC OR ALUMINIUM FOIL) ON TO THE COOKING HOB. IN THE EVENT, PROMPTLY SWITCH OFF AND REMOVE THE MOLTEN MATERIAL WITH THE SCRAPER PROVIDED WHILE THE TOP IS STILL WARM TO PREVENT IT FROM BEING DAMAGED. **FAILURE TO INSTANTLY CLEAN THE GLAZED CERAMIC HOB COULD LEAD TO ENCRUSTATIONS WHICH ARE IMPOSSIBLE TO REMOVE ONCE THE HOB HAS COOLED DOWN.**



The manufacturer declines all responsibility for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance or by the use of non-original spares.

2. SAFETY INSTRUCTION



INSTRUCTIONS FOR THE INSTALLER: THESE ARE INTENDED FOR THE QUALIFIED TECHNICIAN WHO MUST INSTALL THE APPLIANCE, SET IT FUNCTIONING AND CARRY OUT AN INSPECTION TEST.



IT IS OBLIGATORY FOR THE ELECTRICAL SYSTEM TO BE GROUNDED ACCORDING TO THE METHODS REQUIRED BY SAFETY RULES.



DURING USE THE APPLIANCE BECOMES VERY HOT. TAKE CARE NOT TO TOUCH THE SURFACE OF THE HOB.



L'APPARECCHIO È DESTINATO ALL'USO DA PARTE DI PERSONE ADULTE. NON PERMETTERE A BAMBINI DI AVVICINARVISI O DI FARNE OGGETTO DI GIOCO.



THE APPLIANCE BECOMES VERY HOT DURING USE. SUITABLE HEAT-PROOF GLOVES SHOULD BE WORN FOR ALL OPERATIONS.



IMMEDIATELY AFTER INSTALLATION CARRY OUT A BRIEF INSPECTION TEST OF THE APPLIANCE, FOLLOWING THE INSTRUCTIONS BELOW. SHOULD THE APPLIANCE NOT FUNCTION, DISCONNECT IT FROM THE SUPPLY AND CALL THE NEAREST TECHNICAL ASSISTANCE CENTRE.



NEVER ATTEMPT TO REPAIR THE APPLIANCE. ALL REPAIRS MUST BE CARRIED OUT BY AN AUTHORISED ENGINEER OR AT AN AUTHORISED SERVICE CENTRE.



Important.

 
 
Beware of children in the vicinity as the signal lamps indicating residual heat are out of sight to them. In fact, even after having been turned off, the cooking hob remains hot for a certain period of time.

Make sure that children never touch the cooking hob.





3. KNOW YOUR HOB

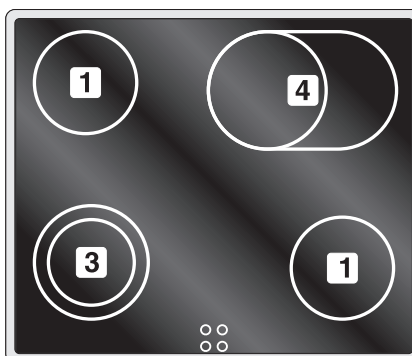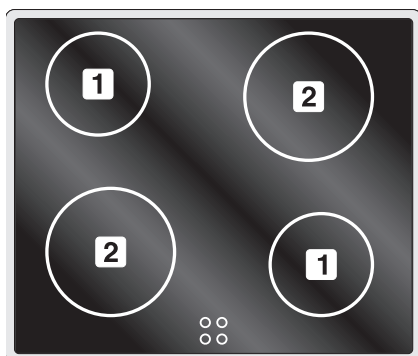

1

Glass surface of the appliance

2

Single plate

3

Dual oval plate

4

Dual round plate

The appliance features 4/5 cooking zones of different diameter and power. Their position is clearly indicated by circles and the heat given off is defined by the markings on the glass surface.. The 5 cooking zones are of the HIGH-LIGHT type and come on after a few seconds of being activated.

4. BEFORE FIRST USE



Do not leave the packing in the home environment. Separate the various waste materials and take them to the nearest special garbage collection centre.



 
When using for the first time, it is advisable to heat up the cooking hob to its maximum temperature for enough time so as to burn off any possible oily manufacturing residues, the smell of which could otherwise be absorbed by the food.

Remove all the removable label and any protective foils.

5. RESIDUAL HEAT

The 4 signal lamps located between the cooking zones come on when the temperature of one or more of the heating zones exceeds 60°C.

The lamps go off upon temperature dropping to below approximately 60°C.

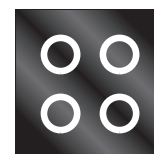



Instructions for the user

GB-IE


6. COOKING TIPS

The table below shows the power values which can be set, with the relative type of food alongside. Setting may vary depending on the amount of food and personal taste.

KNOB SETTING	NUMBER ON THE DISPLAY	TYPE OF FOOD
1	1	To melt butter, chocolate, and the like.
2	2-3	To heat food, keep small amounts of water on the boil, and whip up sauces with egg yolk or butter.
3	4-5	To heat solid or liquid food, keep small amounts of water on the boil, thaw deep-frozen food, cook omelettes of 2 or 3 eggs, fruit and vegetables, and the like.
4	6	To stew meat, fish and vegetables, simmer food, make jams, and so on.
5	7-8	To roast meat, fish, steaks, and liver; to sauté meat, fish, eggs and so on.
6	9	To deep-fry potatoes, etc and to quick-boil water.

For best results and energy saving, only use receptacles suitable for electric cooking:

 - The bottom of the receptacles must be very thick and perfectly flat; before placing on the cooking hob, make sure that it, as well as the cooking hob itself, are perfectly clean and dry.
- To avoid scratching of the cooking hob, never use cast-iron receptacles or receptacles with a rough bottom.
- To avoid waste of energy, make sure that the diameter of the receptacle bottom is the same as that of the circle marked on the cooking hob.

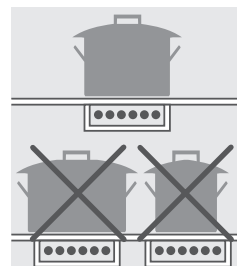



7. CLEANING AND MAINTENANCE



Before any intervention, disconnect the power supply of the device.

7.1 Cleaning the glazed ceramic hob



The cooking hob should be regularly cleaned; best after every use, once the residual heat signal lamps have gone off.

Smudges from aluminium-bottom pans can be easily cleaned off with a cloth dampened in vinegar.

Remove any burnt residues after cooking with the scraper provided; rinse with water and wipe dry with a clean cloth. Regular use of the scraper considerably reduces the need for chemical detergents for the daily cleaning of the hob.

Never use abrasive or corrosive detergents (e.g. cleaning powders, oven sprays, spot-removers, wire sponges).



NEVER USE A STEAM JET TO CLEAN THE APPLIANCE.

8. SOMETHING WRONG?

PROBLEM	POSSIBLE CAUSES	WHAT TO DO?
The hob doesn't work	<ul style="list-style-type: none"> - The hob is not wired in or switched on at the wall. - There is a power failure 	<ul style="list-style-type: none"> - Switch on at the wall - Check power supply
The results of cooking are unsatisfactory	<ul style="list-style-type: none"> - Temperature is too high or too low - Wrong shelf position - Wrong type of dish - Cooking time is incorrect 	<ul style="list-style-type: none"> - Consult cooking tips
The hob smokes	<ul style="list-style-type: none"> - The hob is dirty - Food has spilled over 	<ul style="list-style-type: none"> - Clean the hob once cooking is finished. Let it cool first. - Use a larger pan



Instructions for the installer

GB-IE

9. INSTALLATION

9.1 Technical information

Hob type See rating plate
Electrical connections 220-240V~ 50Hz/380-415V 2N~ 50Hz/380-415V 3N~ 50Hz

HOB RATING Electric
Maximum electrical power See rating plate

 
DIMENSION OF THE HOB

Width (mm) 595
Depth (mm) 510

9.2 The rating plate



Make sure that the voltage and capacity of the power line conform to the data shown on the plate located under the casing. **Do not remove this plate for any reason.**

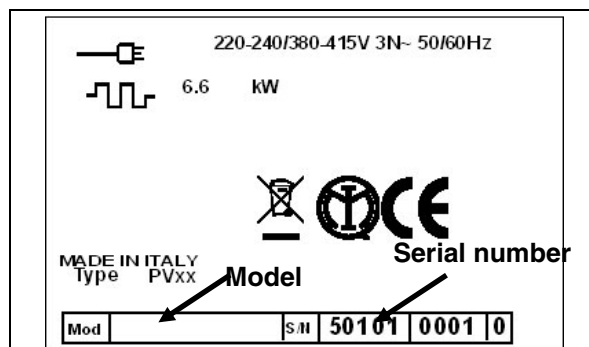

9.3 Electrical connection



IT IS OBLIGATORY FOR THE ELECTRICAL SYSTEM TO BE GROUNDED ACCORDING TO THE METHODS REQUIRED BY SAFETY RULES.



IMMEDIATELY AFTER INSTALLATION CARRY OUT A BRIEF INSPECTION TEST OF THE HOB, FOLLOWING THE INSTRUCTIONS. IF THE HOB FAILS TO OPERATE, AFTER CHECKING THAT YOU HAVE CARRIED OUT THE INSTRUCTIONS CORRECTLY, DISCONNECT THE APPLIANCE FROM THE ELECTRICAL MAINS AND CONTACT YOUR NEAREST SERVICE CENTRE.

NEVER ATTEMPT TO REPAIR THE APPLIANCE.



The manufacturer declines all responsibility for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance.



9.4 POSITIONING OF THE HOB



 
The following operation requires building and/or carpentry work so must be carried out by a competent tradesman.

Installation can be carried out on various materials such as masonry, metal, solid wood or plastic laminated wood as long as they are heat resistant (T 90°C).

Create an opening with the dimensions shown in the figure in the top surface of the counter, keeping a minimum distance of 50 mm from the rear border.

This appliance can be mounted against walls higher than the work surface on condition that a certain distance "X" be kept between the appliance and the wall as shown in the figure so as to avoid damage from overheating.

Make sure there is a minimum of **750 mm** between the hob and any shelf that may be installed directly above them.

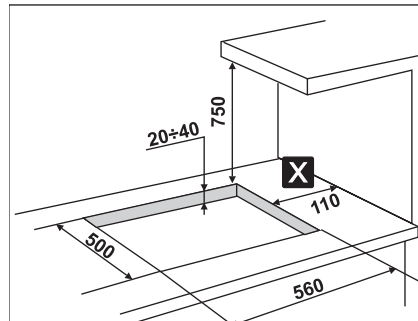

9.5 Mounting

Before mounting the device to the unit, lay the provided adhesive sponge onto the glass surface to separate it from the unit.

After fixing the provided adhesive sponge (**B**) to the glass, mount the device to the unit with the mounting brackets (**A**) provided with the device itself, as shown in the figure.

